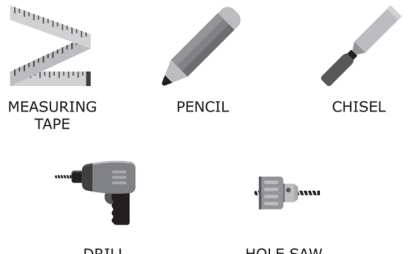
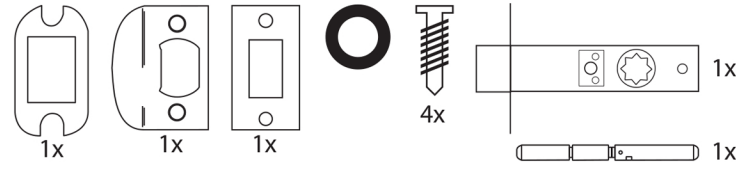
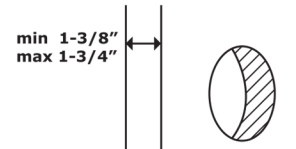
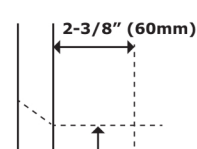
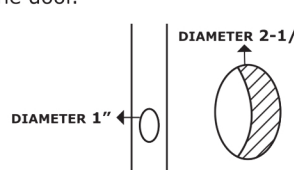
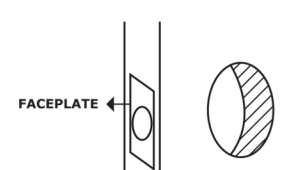
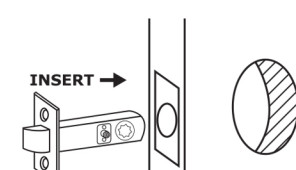
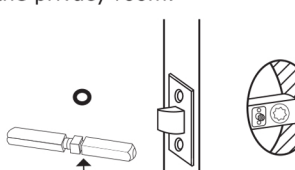
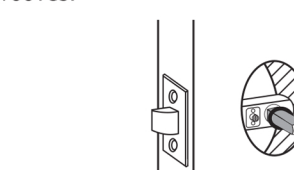
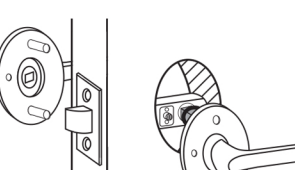
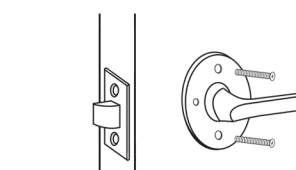
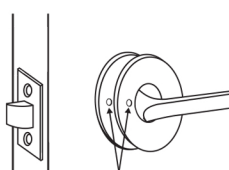

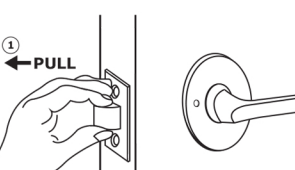
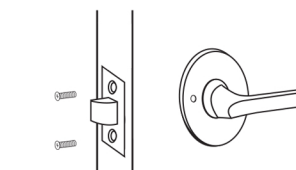
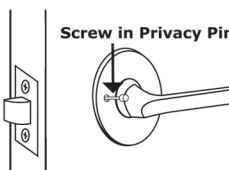
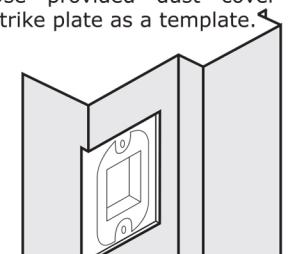
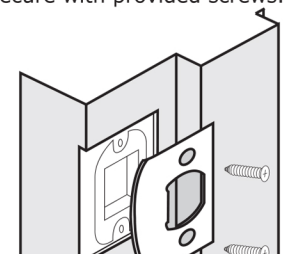


DOOR LEVER INSTALLATION INSTRUCTIONS

TOOLS NEEDED FOR INSTALLATION	INCLUDED PARTS
 <p>MEASURING TAPE</p> <p>PENCIL</p> <p>CHISEL</p> <p>DRILL</p> <p>HOLE SAW</p>	 <p>1x</p> <p>1x</p> <p>1x</p> <p>4x</p> <p>1x</p> <p>1x</p>

<p>Measure thickness of the door before the installation. The door lever will not fit if your door is thinner than 1-3/8" or thicker than 1-3/4".</p>  <p>min 1-3/8" max 1-3/4"</p> <p>1</p>	<p>Using enclosed template, mark door at desired lever height and backset size. Standard included backset is 2-3/8" (60mm).</p>  <p>2-3/8" (60mm)</p> <p>2</p>	<p>Bore 2" or 2-1/8" hole until point of drill breaks through. Then complete hole from the other side. Bore 1" hole from edge of the door.</p>  <p>DIAMETER 2-1/8"</p> <p>DIAMETER 1"</p> <p>3</p>	<p>Mortise area for faceplate on edge of door. Use included faceplate as template.</p>  <p>FACEPLATE</p> <p>4</p>
<p>Insert latch into pre drilled hole. (For Privacy Lever: Make sure the threaded side faces privacy room.)</p>  <p>INSERT →</p> <p>5</p>	<p>Remove O-Ring from the spindle. DO NOT DISCARD THE O-RING Insert spindle into the latch, make sure side with groove goes inside the privacy room.</p>  <p>SIDE WITH GROOVES INSIDE PRIVACY ROOM</p> <p>6</p>	<p>Make sure grooves on the spindle visible on the other side. Slide O-Ring onto the spindle, make sure O-Ring inserted into grooves.</p>  <p>7</p>	<p>Install handles.</p>  <p>8</p>
<p>Use provided screws to secure the handles. Make sure to hold latch and handles in correct position before tightening the handles.</p>  <p>9</p>	<p>Install Rosettes. (For Privacy: Align privacy pin hole with hole on the handle.)</p>  <p>ALIGN</p> <p>10</p>	<p>For square rosette - Use provided wrench to secure the rosettes by screwing the pin from the bottom of the rosette. For round rosettes - slide the rosette on to handle.</p>  <p>11</p>	<p>Pull the tang of the latch and turn to adjust swing direction if needed.</p>  <p>① PULL</p> <p>② TURN</p> <p>12</p>
<p>Install Faceplate.</p>  <p>13</p>	<p>Install privacy pin. (For Privacy Lever Only)</p>  <p>Screw in Privacy Pin</p> <p>14</p>	<p>Mortise door jamb for strike plate. Use provided dust cover and strike plate as a template.</p>  <p>15</p>	<p>Install dust cover and strike plate. Secure with provided screws.</p>  <p>16</p>